



Interceptor™ GT Chin Spoiler Installation Instructions



Contents:

- 1- Chin Spoiler
- 2- Push Pin Retainers
- 1- Roll of ½" x 44" 3M Acrylic Bonding Tape (#950010)
- 2- Alcohol Packs
- 1- Adhesion Promoter Pack

Tools Required:

- Phillips Head Screwdriver
- 80-120 Grit Sandpaper
- Razor Blade may also be needed

NOTE: Read all instructions before installing. It is advised to test fit the chin spoiler before painting! To ensure consistency of color and quality of paint, it is recommended that a qualified professional automotive painting facility does the painting for you (if applicable). We recommend that the paint curing temperature not exceed 150° F. Also, the taping surfaces must have a temperature of 70° F or above to insure proper adhesion.


IMPORTANT: Failure to follow these instructions may result in damage to the product. MRT-Direct does not warranty any installation and will NOT be responsible for improperly installed spoilers.

Questions? Call (734)455-5807, see www.mrt-direct.com,
Or Email: sales@mrt-direct.com


Interceptor GT Chin Spoiler Instructions

Installation:

1. Prepare to apply the 3M tape by sanding the area that will be taped with 80-120 grit sandpaper.
2. Now clean the sanded pieces with the included alcohol and allow time to dry.
3. Apply the adhesion promoter and allow time to dry. **The promoter may discolor paint, so be sure to use only where needed! Drying time is generally 45 seconds to 1 minute, but may vary depending on conditions.**
4. Apply the 3M acrylic tape and cut with a razor blade where a continuous piece is not possible. **The tape should be applied WITHIN 1 HOUR of applying the adhesion promoter. A temperature of between 60° F and 110° F is recommended for best adhesion.**
5. Apply even and firm pressure on the tape to make sure it sets on the piece. **The tape will not be fully bonded until at least 72 hours have passed. Make sure to take care in certain conditions until the tape is fully bonded.**

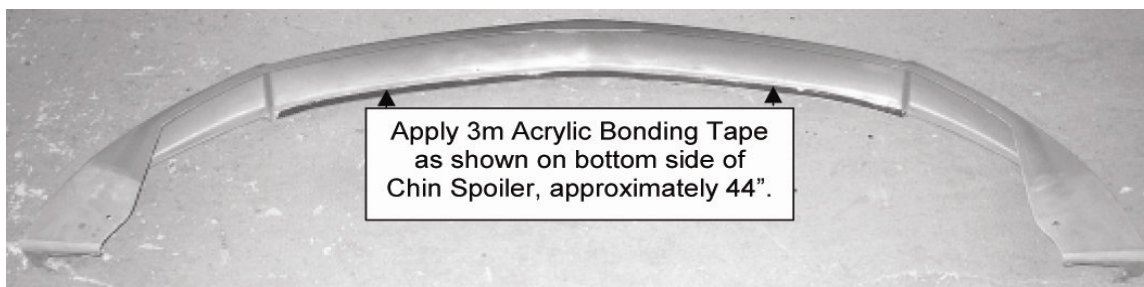

6. Prepare to install your chin spoiler. It can be installed with vehicle on the ground, or you can raise the front end to help ease installation. Also, removal of the front wheels can also ease install process.
7. Next, remove the two (2) lower screws from the wheel opening that secure the wheel well liner to the front fascia.
8. Clean the front fascia where the tape will be bonding and then wipe with alcohol. Allow time to dry.
9. Attach one end of the chin spoiler into the wheel opening with the two (2) factory screws removed step #8.
10. Peel 2-3 inches of the red backing to the tape,
11. Place the chin spoiler in place along the ledge in front of the lower grille and press the exposed portion of the tape to the fascia.
12. Stretch other end of the chin spoiler into the second wheel opening and secure with the factory screws.

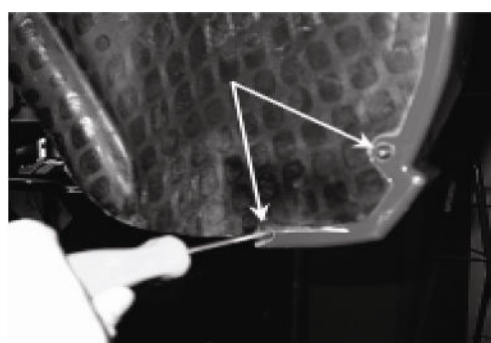

13. Finish peeling back the red backing of the tape and press over the tape area to secure it to the fascia.
14. Install the included push pin retainers through the chin spoiler securing it to the bottom side of the fascia. The holes in the fascia from the factory.

Questions? Call (734)455-5807, see www.mrt-direct.com,
Or Email: sales@mrt-direct.com