



MRT

WWW.SHOPMRT.COM

V6 & SS Camaro Axle Back Exhaust Installation

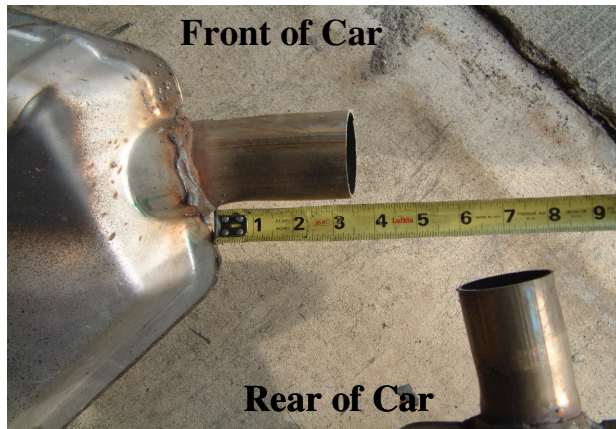

Left Cut Exhaust

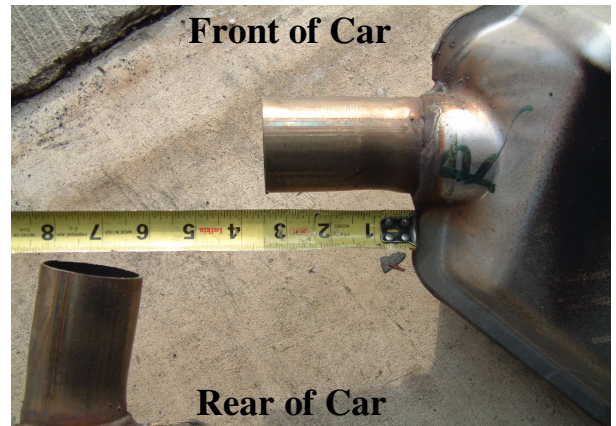

Right Cut Exhaust

Materials:

- Left axle back exhaust
- Right axle back exhaust
- 2 Exhaust Band Clamps
- Instructions Sheet

Instructions:

- Cut current exhaust system 3½" from muffler both left and right side (see pictures above)
- Remove stock mufflers
- Remove stock muffler hangers
- Insert stock hanger onto new exhaust
- Slide band clamp on to new muffler
- Remove burr or rough metal from edge of the stock exhaust tube.
- Slide muffler into position and secure stock hangers
- Align tip to rear fascia opening
- Position clamp to the edge of MRT exhaust, clamp should extend approximately 1/8 inch past end of axle back tube.
- Tighten Clamp while maintaining tip alignment
- **Question or Help** contact MRT at 734-455-5807

Note: Adjustment of tip can be made by sliding the axle back in/out and rotational at clamp joint